



TECHNICAL SPECIFICATION

Technical Service Department,
JSP Ltd., Worsham Mill, Minster
Lovell, Oxford, OX29 0TA
Tel.: 01993 824000
Fax: 01993 824422

232 Vertical Fold Flat Disposable Dust Mask

Conformity:

Meets the FFP3 requirements of EN 149.

EC Certificate Number 73058, issued by BSi Product Certification.

Performance:

Offers an assigned protection factor (APF) of 20 x Workplace Exposure Limit (WEL) for very fine dusts, fibres, fumes and mists.

Markings:

EN149 : 2001 FFP3


Materials:

Man made fibres
Polystyrene exhalation valve with rubber diaphragm

Instructions For Use:

Mask must be fitted in accordance with the instructions supplied.

Care must be taken to ensure that the correct mask type is selected for the work to be carried out. If in doubt as to the type of mask required seek professional advice.

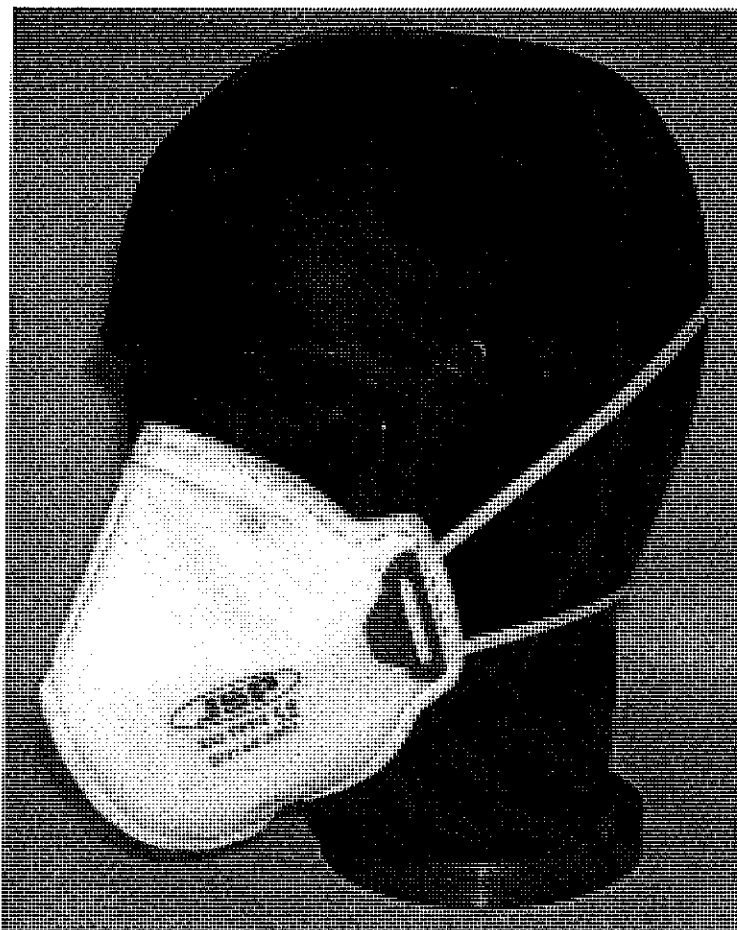

Limitations Of Use:

Protection will only be offered if the mask is fitted correctly.

The mask, when in contact with the skin may cause allergic reactions to susceptible individuals. If this occurs leave the hazard area, remove mask and seek medical advice.

Notes:

- i. ***The use by date is printed on the outer packaging.***
- ii. ***Do not use where exposure to chemical gases may be experienced.***
- iii. ***Use in well ventilated areas only, which are not deficient in oxygen and do not contain explosive atmospheres.***
- iv. ***Ensure good seal around the face is created before entering the hazard area.***
- v. ***The working life of the mask is nominally one day (this is based on an working day shift of 8 hours), however it may be affected by many factors, including work rate, airflow and concentration of any contaminant in the atmosphere. The mask should be changed immediately if, a.) Breathing difficulties due to clogging are experienced, b.) Breakthrough of a contaminant is detected by smell, taste or any other means, or c.) The mask becomes damaged.***
- vi. ***This mask is not designed to be worn by people with facial hair.***

Cleaning & Maintenance:

Not applicable - disposable product.

Store the masks out of direct sunlight away from chemicals and in a dry atmosphere.

Manufacturing For Safety

Page 1 of 1

THE INFORMATION IN THIS DOCUMENT IS CORRECT AS OF PRINT DATE

PRINTED AT 15:44 ON 27/03/08