


RACING LANE LINES - Competitor®

A few pointers for better results and for longer product life.

Maintain racing lanes to get the longest life possible.

The racing lane line should be installed with both the take up reel and the tension spring in the pool water, never on pool deck. If anchor point is on pool deck an extension hook should be used.

A performing Racing Lane should be installed and tightened so that the discs “stand up” when no turbulence in water. That indicates that the discs will be able to move to absorb turbulence and water energy when needed. The tension spring should be barely opened 0,5mm.

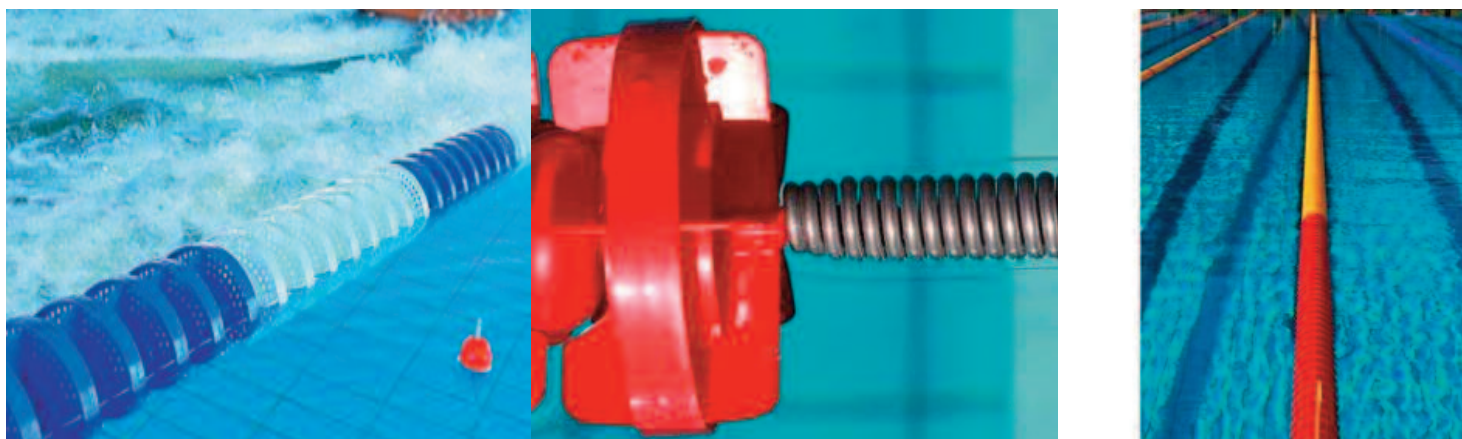

When taking out or putting in the lane line it is recommended to use the SE827 Lane Slider, this way both lane and pool deck edge are protected.


The handling of the Take-Up Reel should only be done with an original SE170 Ratchet Spanner. Any other tool may damage the Take-Up Reel. When Take-Up Reel is under tension, never hit thumb pawl with Ratchet Spanner to release. Do not allow spool to run free. This could damage the teeth of the spool, cause a backlash of cable and be dangerous to operator.

The cable of the racing lane is designed to be used under normal conditions. Improper use such as hanging on the racing lane or jumping in and grabbing the lane may cause the cable to rupture or damage the Take-Up Reel.

SE170 Ratchet Spanner
Storage & Maintenance



Dry thoroughly after each use.
Do not store in plastic pouch or airtight container.
Regularly apply a small amount of WD40 or similar to all moving parts.

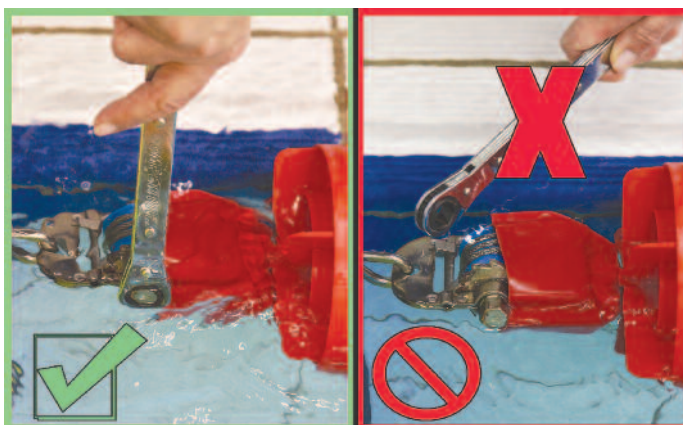


Store Racing Lanes: When not in the pool, rinse with tap water and allow to dry on an SE16/SE295 Storage Trolley, in a well ventilated storage area, at room temperature and out of direct sun light.

The Competitor Take-Up Reel is very durable and built for the rugged conditions of a pool, with proper care, it will last a very long time, when misused it can be damaged beyond repair in a short time.

To maintain the racing lanes anti turbulence capability and prevent possible injury replace broken discs or damaged cable immediately .

For more information please contact us at sales@JPL.co.uk


OPERATING INSTRUCTIONS for COMPETITOR® RATCHET REEL LANE TIGHTENER

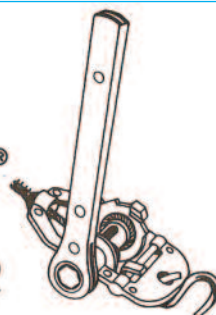


WARNING

WHEN REEL IS UNDER TENSION NEVER HIT THUMB PAWL WITH RATCHET WRENCH TO RELEASE CATCH LOCK. DO NOT ALLOW REEL SPOOL TO RUN FREE. THIS WILL DAMAGE TEETH ON SPOOL AND CAUSE BACKLASH OF CABLE. IT IS ALSO DANGEROUS TO OPERATOR.

TIGHTENING LANES

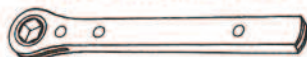

1. Use only COMPETITOR® wrench to tighten lanes.
2. Wind cable on reel spool evenly. Do not overlap.

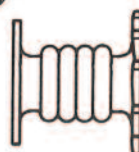

RELEASING LANES

1. Use only COMPETITOR® wrench to loosen lanes.
2. Increase lane tension enough to release pressure on locking device.
3. Depress thumb pawl on locking device and allow spool to release tension one notch,
4. Repeat steps 2 and 3 until tension is completely released.

With proper care a COMPETITOR® reel will last a lifetime. When misused the reel can be damaged beyond repair in a short time.